

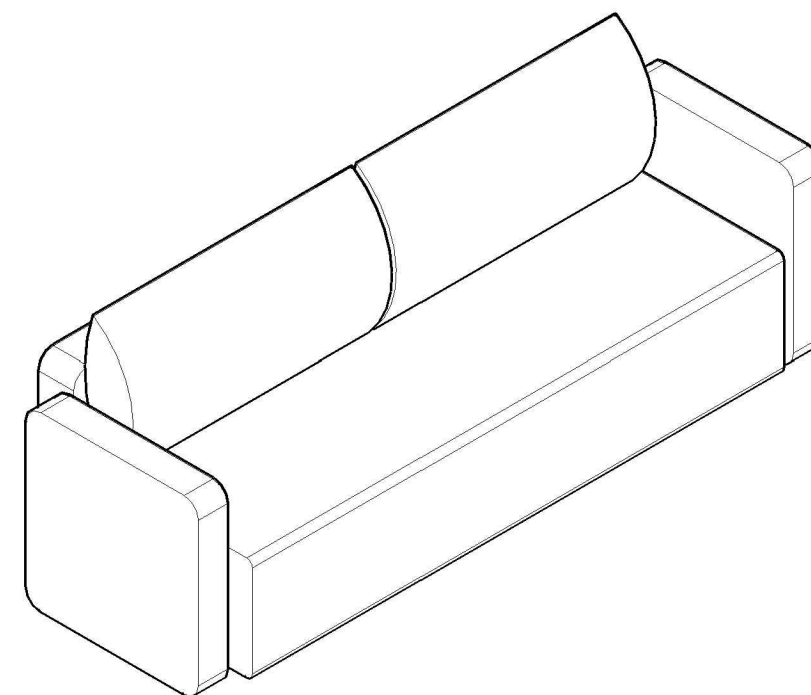


SOFÁ CAMA CLOUD

SKRAUT
HOME

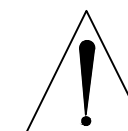


1H:30MN

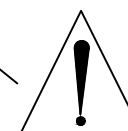

ES	SEGURIDAD RESPECTAR LAS INSTRUCCIONES DE MONTAJE DESCRITAS EN EL FOLLETO	PT	SEGURANCA RESPEITAR AS INSTRUÇÕES DE MONTAGEM DESCRÉVIDAS NA INSTRUCOES DE USO
FR	SECURITE RESPECTER LES INSTRUCTIONS DE MONTAGE DANS LA NOTICE	IT	SICUREZZA RISPETTARE LE INSTRUZIONI DI MONTAGGIO DESCRITTE NEEL'AVVERTENZA
EN	CAUTION FOLLOW CAREFULLY THE ASSEMBLING INSTRUCTIONS DESCRIBED IN THE DIRECTIONS	DE	SICHERHEITSVORSCHRIFTEN BEACHTEN SIE BITTE UNGEDINGI DIE ANGELEGEBENER AUFBAUVORSCHRIFTEN




MPATR0011








A	1FR9032	x1	1920 x 250 x 16	C	1LA10045	x2	598 x 250 x 16	E	1VA9101	x1	598 x 155 x 16
B	1FR9033	x1	1920 x 250 x 16	D	1LA10046	x2	598 x 215 x 16	F	MTB2312	x1	1900 x 610 x 3

CAJÓN:

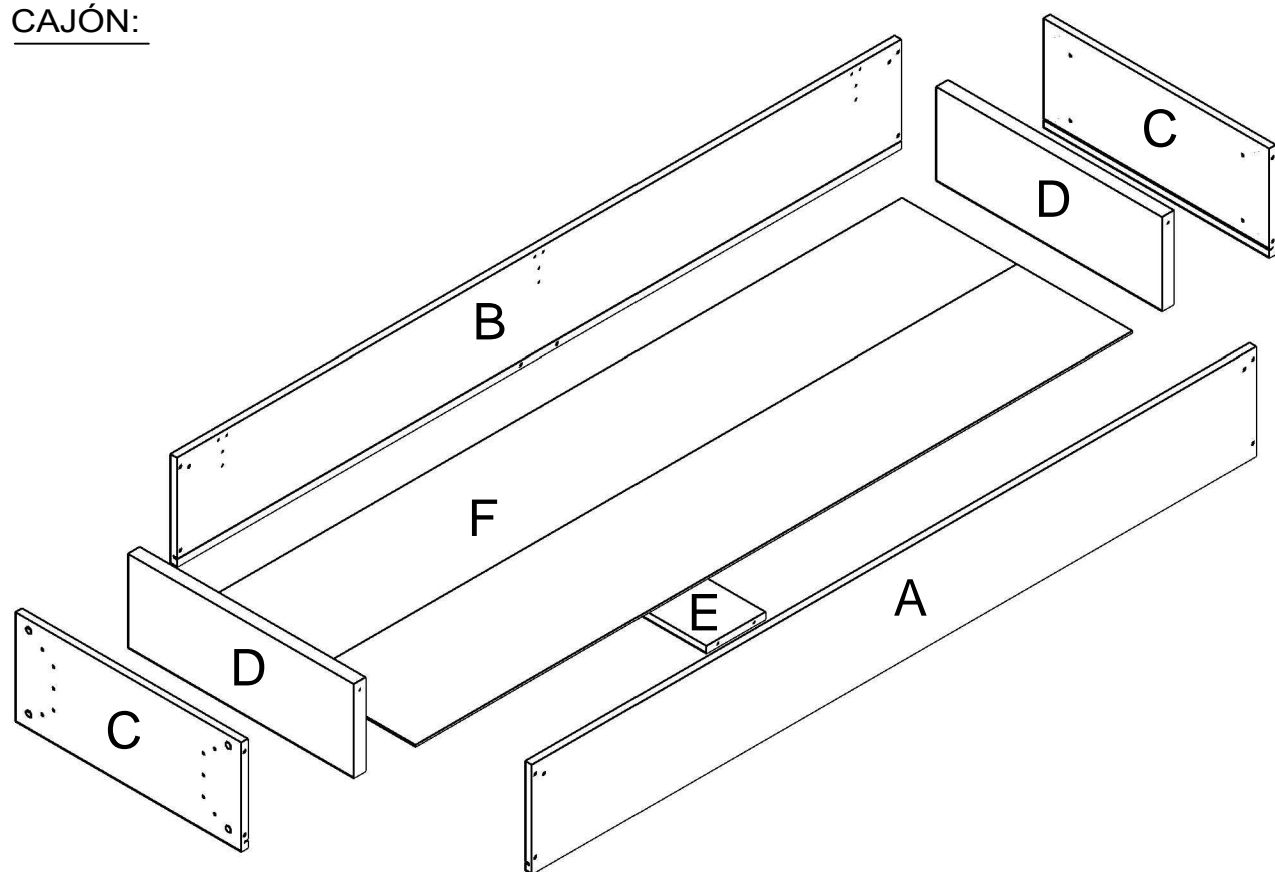

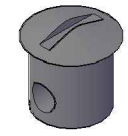
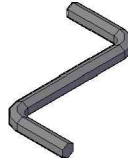
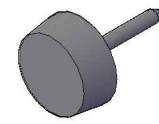


SOFA:

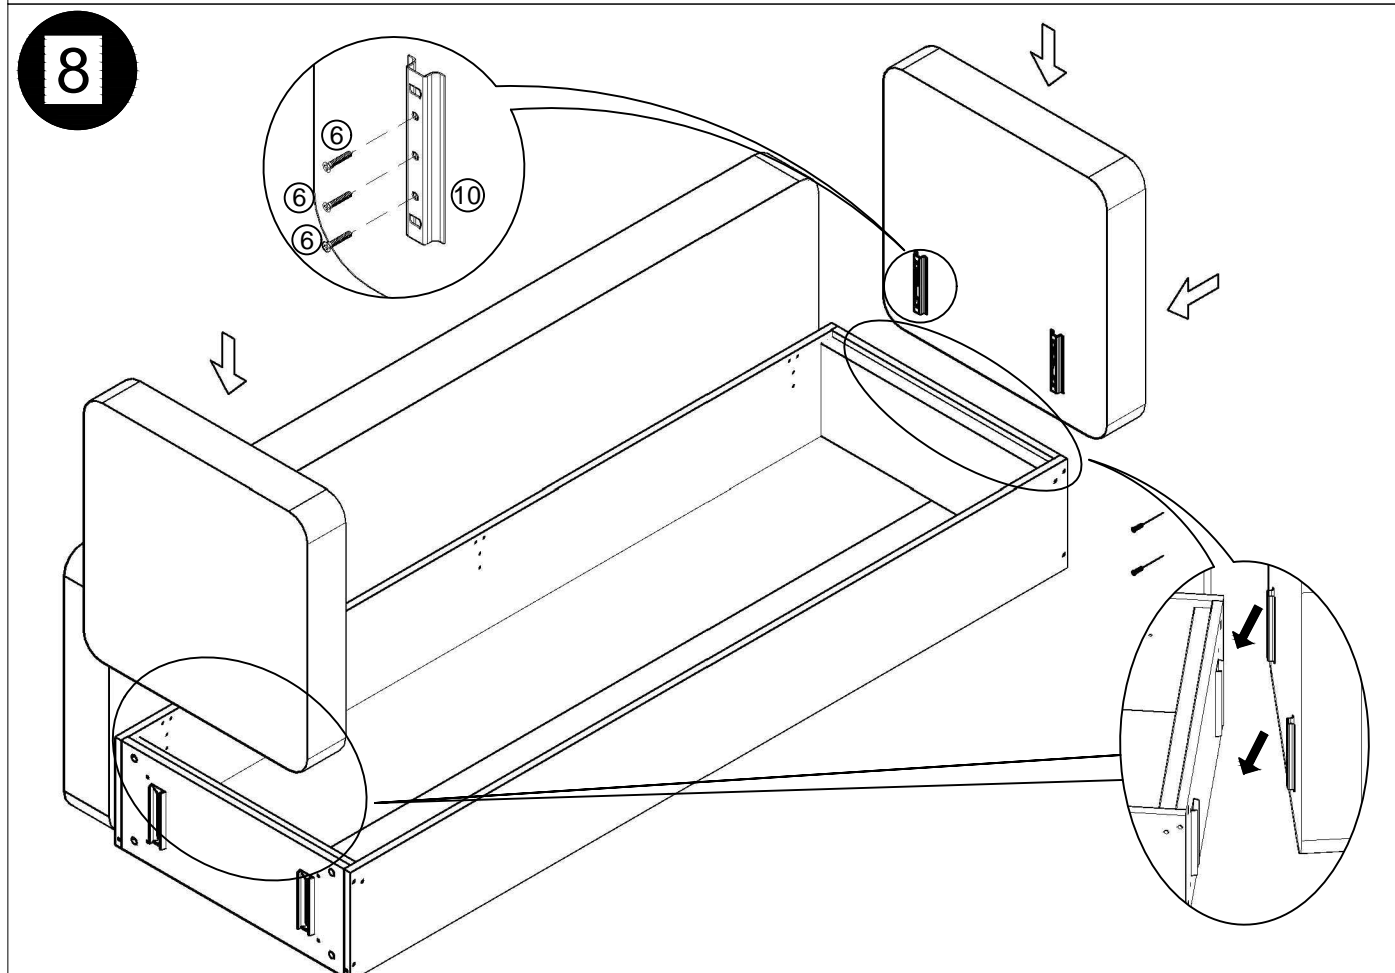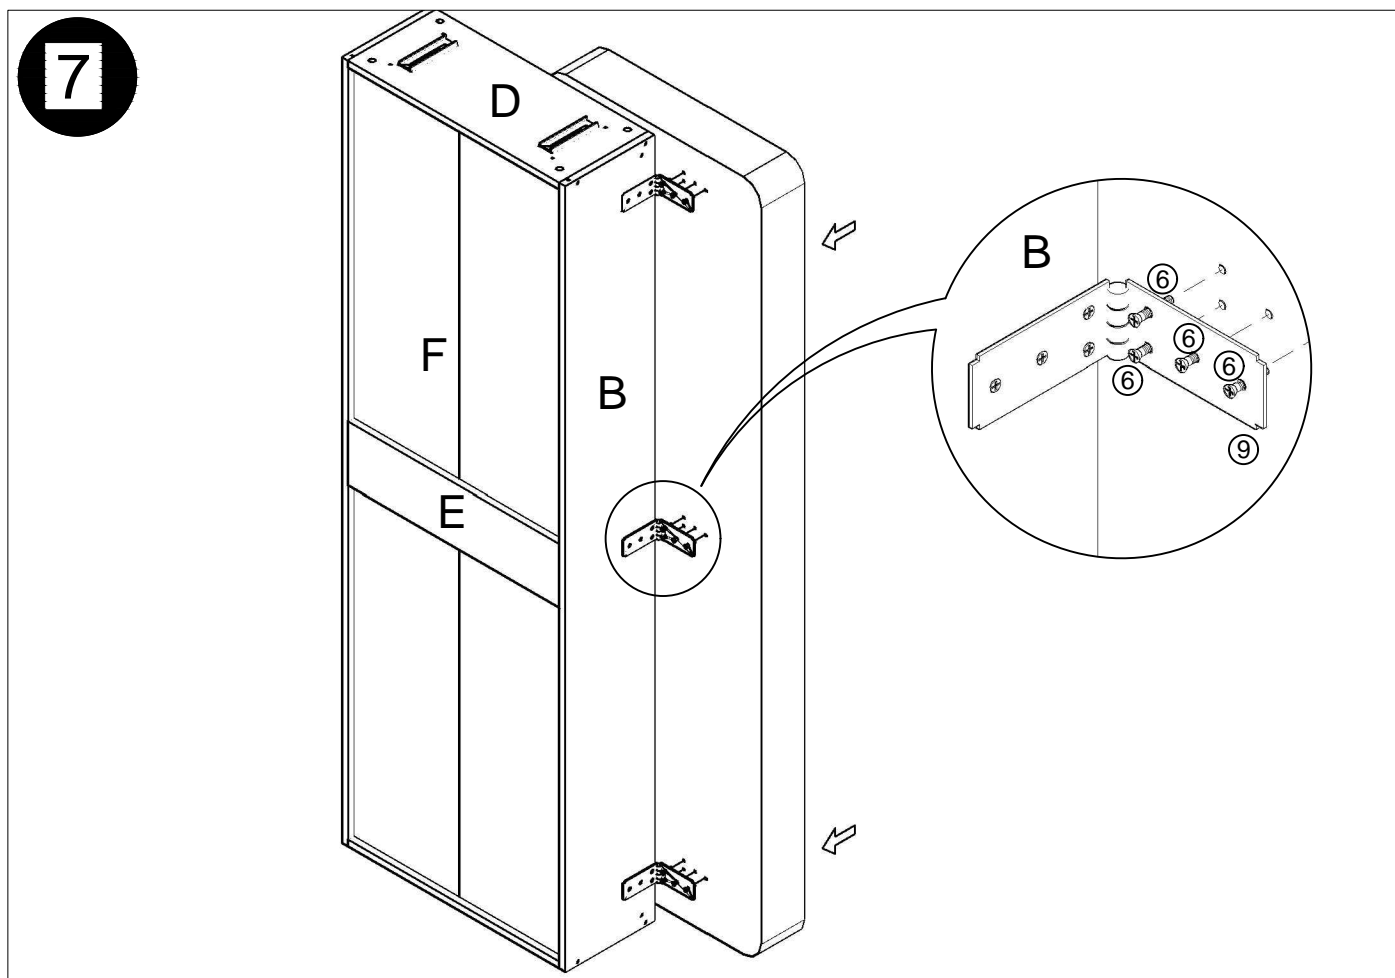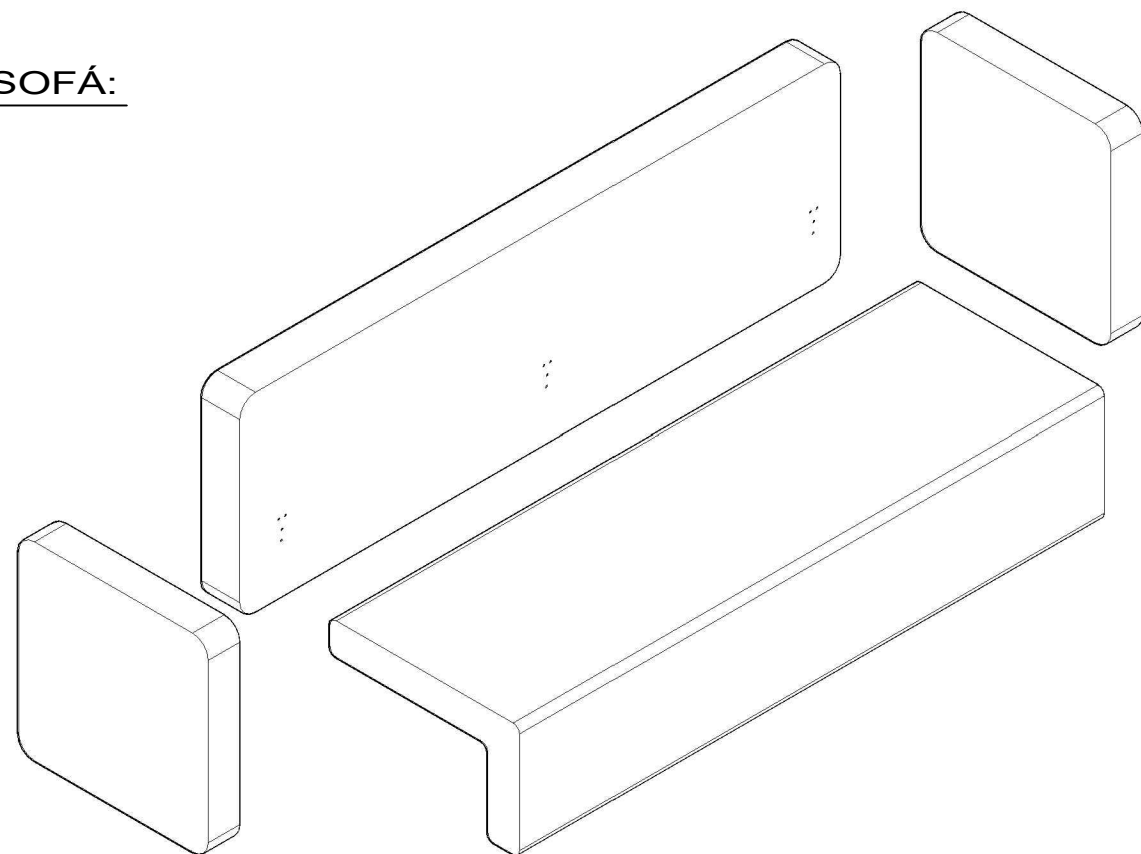


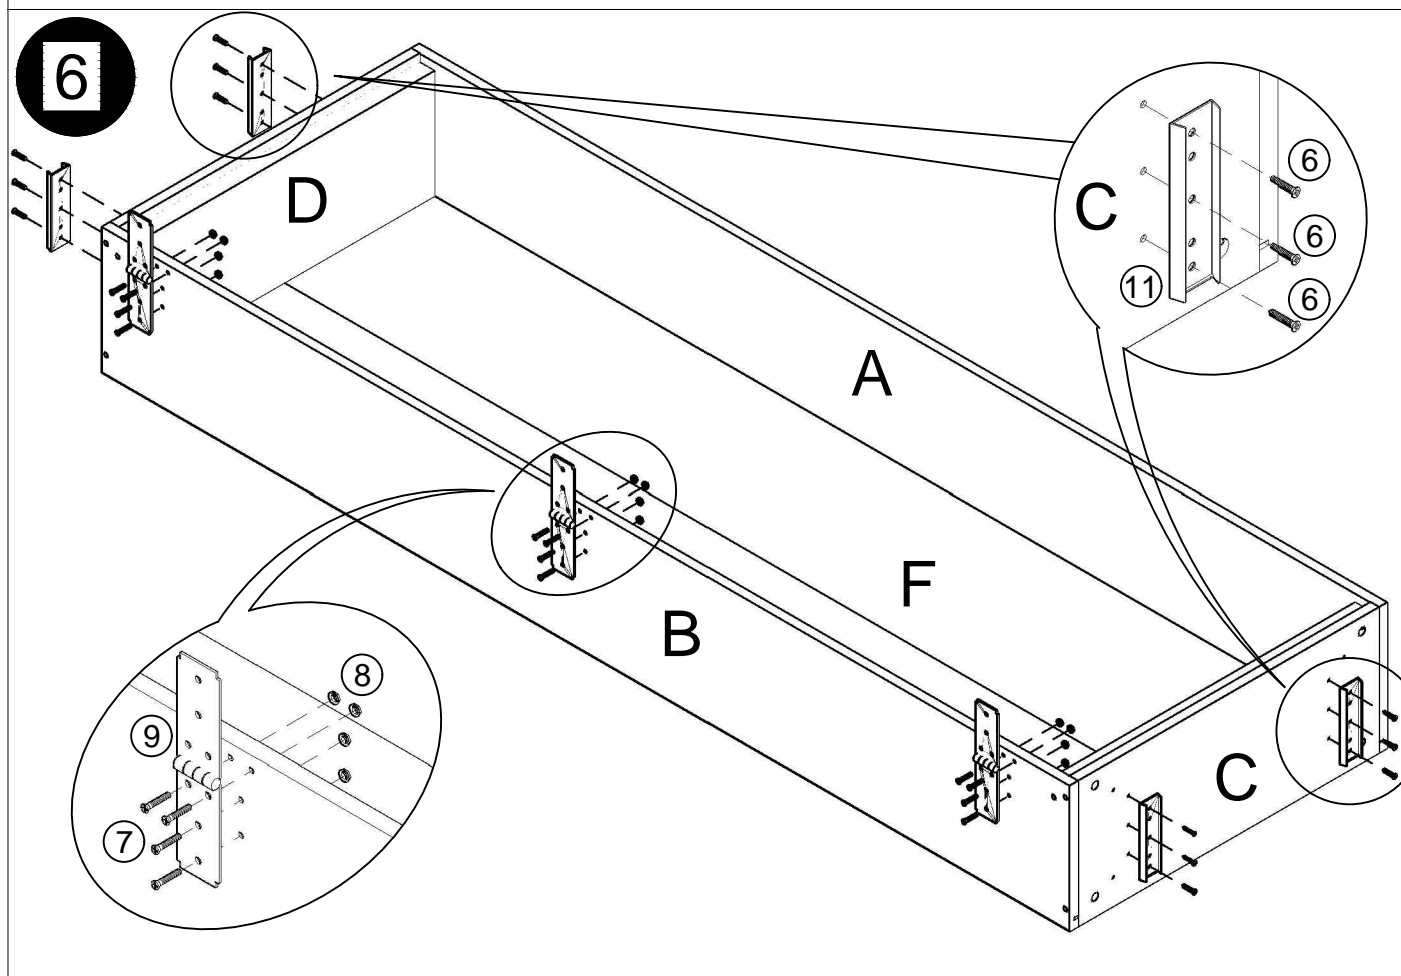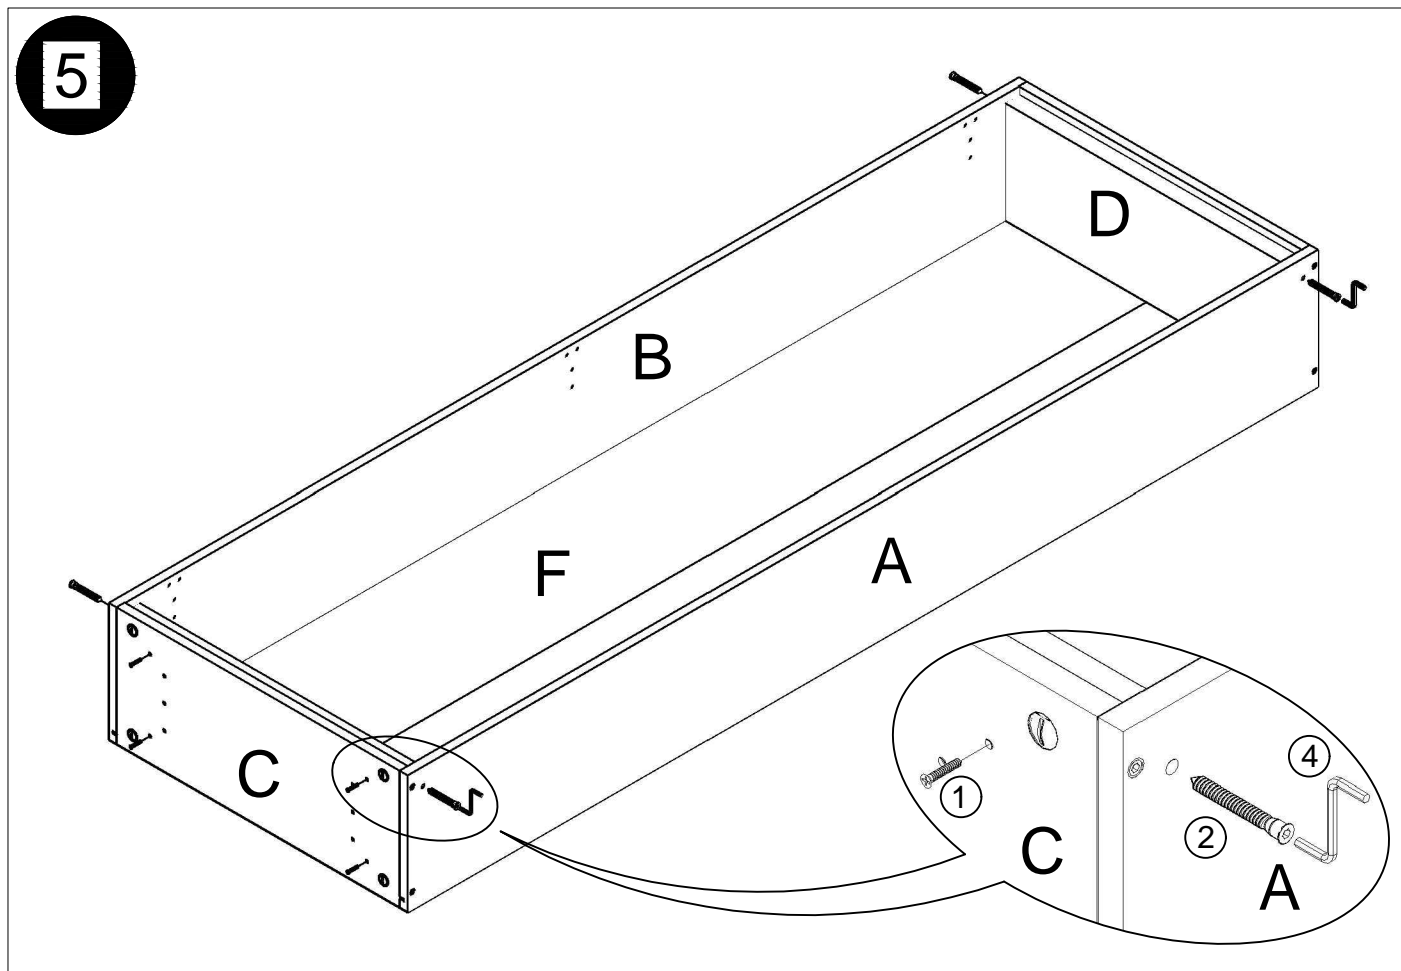

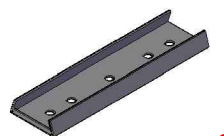


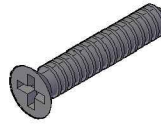

HERRAJE CAJÓN

①	 MTR0250 3,5x30	x8	②	 MTR0590	x16	③	 MTR0600	x8
④	 MVA0865	x1	⑤	 MTA0020	x6			

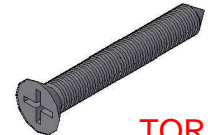HERRAJE SOFÁ

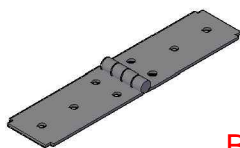⑥	 TOR. R/MAD.	x32	⑦	 TOR. MÉTRICA	x12	⑧	 TUERCA	x12
⑨	 BISAGRA	x3	⑩	 GUIA	x4	⑪	 CARRIL	x4

